


FG1000

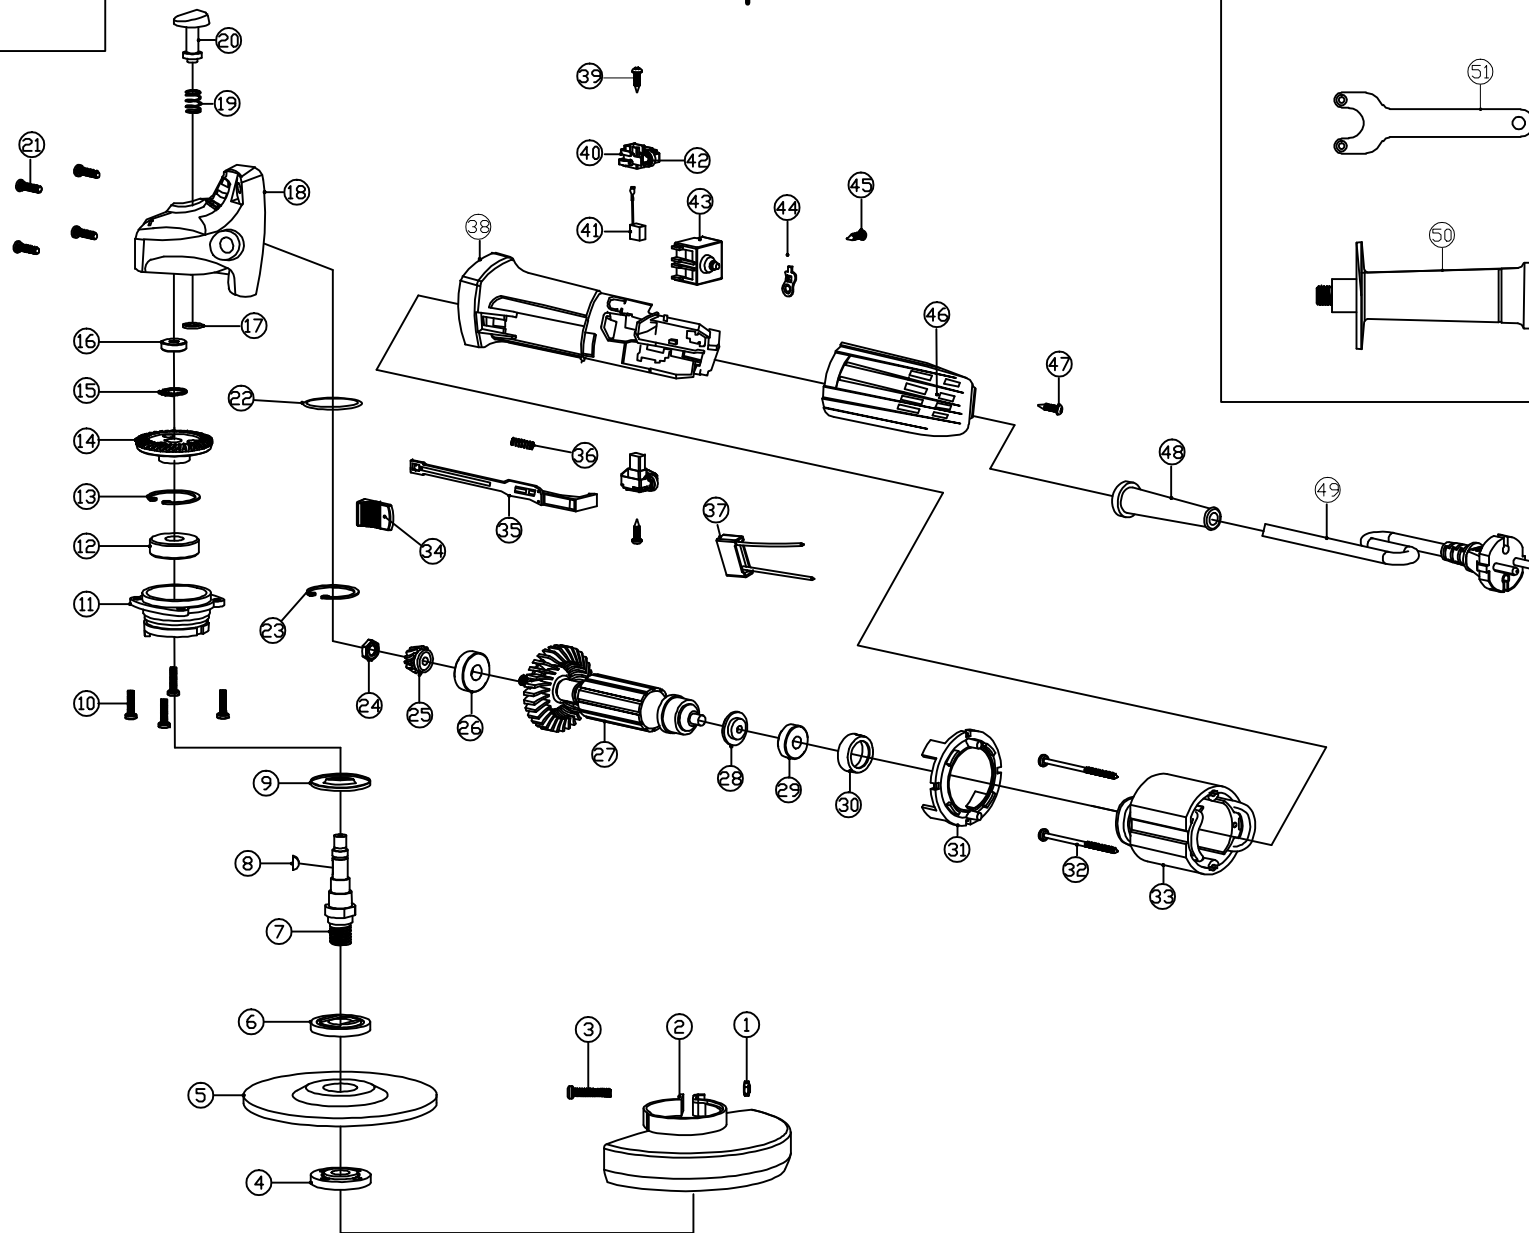

FG1000 SPARE PARTS LIST		
No.	PART NAME	QUANTITY
1	Hex Nut M5	1
2	Wheel Guard	1
3	Screw	1
4	Down press plate	1
5	disc	
6	Upper press plate	1
7	Spindle	1
8	Wood-ruff key	1
9	Dust cover	1
10	PH screw	4
11	Front cover	1
12	Bearing	1
13	internal circlip plier	1
14	Big Gear	1
15	shaft ring	1
16	Bearing	1
17	Spring	1
18	Head Capsule	1
19	Slef lock pin spring	1
20	Slef lock pin	1
21	PH screw	4
22	O ring	1
23	internal circlip plier	1
24	Nut	1
25	Pionion	1
26	Bearing	1
27	Rotor	1
28	Creepage retaining ring	1
29	Bearing	1
30	Bearing cover	1
31	Fan Shroud	1
32	PH screw	2
33	Stator	1
34	Switch button	1
35	Switch rod	1
36	spring	1
37	capacitance	1
38	Main case	1
39	PH screw	2
40	Brush holder	2
41	spring carbon brush	2
42	Coil spring	2
43	switch	1
44	tension disc	1
45	PH screw	1
46	Rear cover	1
47	PH screw	1
48	cable sheath	1
49	Cable	1
50	Side handle	1
51	Spanner	1